



L1016.CL

Material

Aluminium body, steel contact faces.

Technical notes

The manual rail clamps are used in conjunction with the rail carriages L1016.F and L1016.U (flanged and

unflanged). By adjusting the clamping lever, the contact sections are pressed into contact with the rail, clamping the carriage in place.

Order No.	For rail	h_1	l_1	w_1	h_2	h_3	h_4	h_5	l_2	w_2	w_3	w_4	d	Holding force N	Torque to Nm
L1016.CL15-24	15	24	25	47	4,5	12,5	44		17	17	30,5	33,5	M 4	1200	5
L1016.CL15-28	15	28	25	47	4,5	12,5	44		17	17	30,5	33,5	M 4	1200	5
L1016.CL20-28	20	28	24	60	8,0	13,0	63		15	15	38,5	41,5	M 5	1200	7
L1016.CL20-30	20	30	24	60	8,0	13,0	63		15	15	38,5	41,5	M 5	1200	7
L1016.CL25-33	25	33	30	70	9,0	15,0	63		20	20	38,5	41,5	M 6	1200	7
L1016.CL25-36	25	36	30	70	9,0	15,0	63		20	20	38,5	41,5	M 6	1200	7
L1016.CL25-40	25	40	30	70	9,0	15,0	63		20	20	38,5	41,5	M 6	1200	7
L1016.CL30-42	30	42	39	90	12,0	21,5	78		22	22	46,5	50,5	M 6	2000	15
L1016.CL35-48	35	48	39	100	13,0	21,5	78		24	24	46,5	50,5	M 8	2000	15
L1016.CL45-60	45	60	44	120	12,0	26,5	78		26	26	46,5	50,5	M10	2000	15
L1016.CL55-70	55	70	49	140	17,0	31,0	95		30	30	56,5	61,5	M14	2000	22