


Fixed Round Support Units (FK) for ball & lead screws

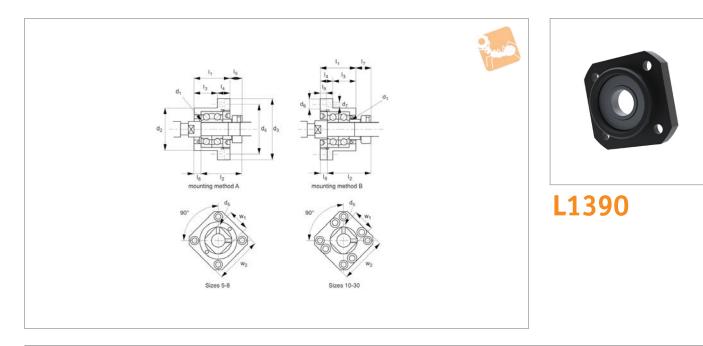



Material

Steel with black oxide finish. Bearings, sealed and lubricated for life.

Technical Notes

Standard units are suitable for ball screws

and lead screws to C5/C7 accuracy grade. The bearings are not preloaded and have a max. axial clearance of 18μ . For dimensions to machine the ends of the screws see technical pages.

Tips

Electroless nickel plated versions of these bearing mounts are available for clean room and other applications.

Order No.		lead screw l o.d dia.	For ball screw o.d dia.	d_1	d ₂ tol. g6	d ₃	d ₄	d ₅	d ₆	d ₇	I_1	I ₂	l ₃
L1390.FK05			6	5	20	34	26	M3	6,5	3,4	16,5	18,5	10,5
L1390.FK06		10	8	6	22	36	28	M3	6,5	3,4	20,0	22,0	13,0
L1390.FK08		12	10	8	28	43	35	МЗ	6,5	3,4	23,0	26,0	14,0
L1390.FK10	1	14 - 16	12	10	34	52	42	M3	8,0	4,5	27,0	29,5	17,0
L1390.FK12	1	18 - 20	14 - 16	12	36	54	44	M4	8,0	4,5	27,0	29,5	17,0
L1390.FK15	2	22 - 24	20	15	40	63	50	M4	9,5	5,5	32,0	36,0	17,0
L1390.FK17		24	20 - 25	17	50	77	62	M4	11,0	6,6	45,0	47,0	23,0
L1390.FK20	2	26 - 32	25 - 28	20	57	85	70	M4	11,0	6,6	52,0	50,0	30,0
L1390.FK25		36	32 - 36	25	63	98	80	M5	15,0	9,0	57,0	60,0	30,0
L1390.FK30		40	40- 45	30	75	117	95	M6	17,5	11,0	62,0	61,0	32,0
									A			Che	امما منه
Order No.	I_4	I_5	I ₆	I ₇	۱ ₈	l ₉	w_1	w ₂		al load kgf	rpm	Sta	tic load kgf
Order No. L1390.FK05	l ₄ 6	ا ₅ 5.5	ا ₆ 3.5	l ₇ 3.0	ا ₈ 5.0	l ₉ 4	w ₁ 11	w ₂ 26			<mark>rpm</mark> 52800		
		-	-		-	-	-	_		kgf			kgf
L1390.FK05	6	5.5	3.5	3.0	5.0	4	11	26		kgf 74	52800		<mark>kgf</mark> 200
L1390.FK05 L1390.FK06	6 7	5.5 5.5	3.5 3.5	3.0 4.5	5.0 6.5	4 4	11 12	26 28	:	kgf 74 74	52800 52800		kgf 200 200
L1390.FK05 L1390.FK06 L1390.FK08	6 7 9	5.5 5.5 7.0	3.5 3.5 4.0	3.0 4.5 5.0	5.0 6.5 7.0	4 4 4	11 12 14	26 28 35		kgf 74 74 103	52800 52800 40000		kgf 200 200 280
L1390.FK05 L1390.FK06 L1390.FK08 L1390.FK10	6 7 9 10	5.5 5.5 7.0 7.5	3.5 3.5 4.0 5.0	3.0 4.5 5.0 8.5	5.0 6.5 7.0 6.0	4 4 4 4	11 12 14 16	26 28 35 42		kgf 74 74 103 195	52800 52800 40000 24000		kgf 200 200 280 530
L1390.FK05 L1390.FK06 L1390.FK08 L1390.FK10 L1390.FK12	6 7 9 10 10	5.5 5.5 7.0 7.5 7.5	3.5 3.5 4.0 5.0 5.0	3.0 4.5 5.0 8.5 8.5	5.0 6.5 7.0 6.0 6.0	4 4 4 4 4	11 12 14 16 19	26 28 35 42 44		kgf 74 74 103 195 217	52800 52800 40000 24000 22000		kgf 200 200 280 530 610
L1390.FK05 L1390.FK06 L1390.FK08 L1390.FK10 L1390.FK12 L1390.FK15	6 7 9 10 10 10	5.5 5.5 7.0 7.5 7.5 10.0	3.5 3.5 4.0 5.0 5.0 6.0	3.0 4.5 5.0 8.5 8.5 12.0	5.0 6.5 7.0 6.0 6.0 8.0	4 4 4 4 4 6	11 12 14 16 19 22	26 28 35 42 44 52		kgf 74 74 103 195 217 240	52800 52800 40000 24000 22000 19000		kgf 200 200 280 530 610 700
L1390.FK05 L1390.FK06 L1390.FK08 L1390.FK10 L1390.FK12 L1390.FK15 L1390.FK17	6 7 9 10 10 15 22	5.5 5.5 7.0 7.5 7.5 10.0 11.0	3.5 3.5 4.0 5.0 5.0 6.0 9.0	3.0 4.5 5.0 8.5 8.5 12.0 14.0	5.0 6.5 7.0 6.0 6.0 8.0 12.0	4 4 4 4 4 6 10	11 12 14 16 19 22 24	26 28 35 42 44 52 61		kgf 74 74 103 195 217 240 413	52800 52800 40000 24000 22000 19000 16000		kgf 200 280 530 610 700 1220





1. Install the fixed side support unit to the screw shaft.

the hexagonal socket head set screw.

Bearing supports mounting prosedure

and then install the assembly to the housing on the supported side.



Notes

When inserting the screw shaft to the support unit, take care not to let the oil seal lip turn upward.

When securing the set piece with a 3. Attach the support side bearing to the screw shaft and secure the bearing using the snap ring, hexagonal socket head set screw, apply an adhesive to the hexagonal socket head set screw before tightening it in order to

prevent the screw from loosening. If planning to use the product in a harsh environment, it is also necessary to take measures to prevent other components/parts from loosening. Contact our Technical Department for details.


Snap Ring Set Screw Bearing Support side Fixed side

2. After inserting the fixed side support unit, secure the lock nut using the fastening set piece and

Installation onto the table and the base


Installing the support unit

- 1. If using a bracket when mounting the ball screw nut to the carriage, insert the nut into the bracket and temporarily fasten it.
- Temporarily fasten the fixed side support unit to the base. In doing so, press the table toward the fixed side support unit to align the axial centre, and adjust the carriage so that it can travel freely.
- 3. Press the carriage toward the fixed side support unit to align the axial centre. Make the adjustment by reciprocating the table several times so that the nut travels slowly over the whole stroke, and temporarily secure the support unit to the base.

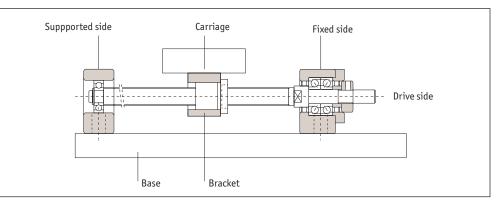

Checking the accuracy and fully fastening the support unit

1. While checking the runout of the ball screw shaft end and the axial clearance using a dial gauge, fully fasten the ball screw nut, the nut bracket, the fixed side support unit and the support side unit, in this order.

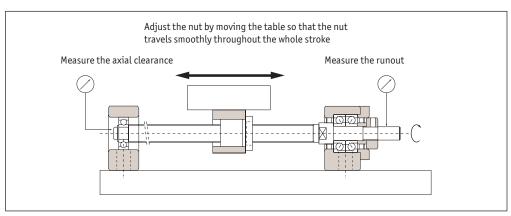

Notes

If using the fixed side support unit as the reference point, secure a clearance 2. between the ball screw nut and the table or inside the bracket when making adjustment.

If using the table as a reference point, make the adjustment either by using the shim (for a square type support unit), or securing the clearance between the outer surface of the nut and the inner surface of the mounting section (for a round type support unit).

LOMOLION

automotioncomponents.co.uk




Bearing supports units assembly



Connection with motor

- 1. Mount motor bracket to the base.
- 2. Connect the motor and the ball screw using a coupling (make sure the mounting accuracy is maintained).
- 3. Mount motor bracket to the base.

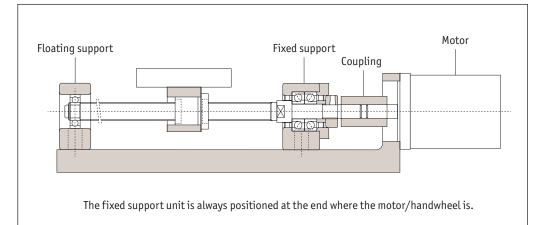








Fixed side for unit types; FK, EK, AK, FKA and LK





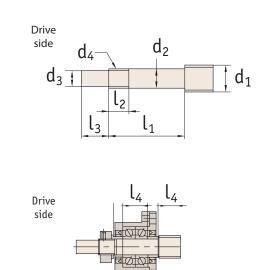

Type L1390.FK (Option 1) L1400.FKA

Drive side	
	All Other Types
Drive side	

 $l_4 \quad l_4$




Part no.					Thread ø	Shaft support ø					For thr	ead	
FK	EK	AK	FKA	LK	d1	d ₂		h ₇	l ₁	l ₃	d ₄	l ₂	l ₄
L1390.FK05	L1394.EK05	-	-	-	8	5	-0,008 -0,015	4	23	6	M5x0,5	7	3,5
L1390.FK06	L1394.EK06	-	-	-	8	6	-0,008 -0,015	4	28	8	M6x0,75	8	5,0
L1390.FK08	L1394.EK08	-	L1400.FKA08	L1402.LK08	10/12	8	-0,008 -0,015	6	32	9	M8x1,0	10	5,5
L1390.FK10	L1394.EK10	L1388.AK10	L1400.FKA10	L1402.LK08	12/14/15	10	-0,008 -0,015	8	35	15	M10x1,0	12	5,5
L1390.FK12	L1394.EK12	L1388.AK12	L1400.FKA12	L1402.LK08	14/15/16	12	-0,008 -0,015	10	35	15	M12x1,0	12	5,5
L1390.FK15	L1394.EK15	L1388.AK15	L1400.FKA15	L1402.LK08	18/20	15	-0,008 -0,017	12	48	20	M15x1,0	13	10,0
L1390.FK17	-	-	-	-	20/25	17	-0,008 -0,017	15	59	23	M17x1,0	17	10,0
L1390.FK20	L1394.EK20	L1388.AK20	L1400.FKA20	-	25/28/30	20	-0,008 -0,017	17	63	25	M20x1,0	15	11,0
L1390.FK25	-	-	-	-	30/32/36	25	-0,008 -0,017	20	76	30	M25x1,5	20	14,0
L1390.FK30	-	-	-	-	36/40	30	-0,008 -0,018	25	73	38	M30x1,5	25	9,0





Fixed side for unit type L1392.BK



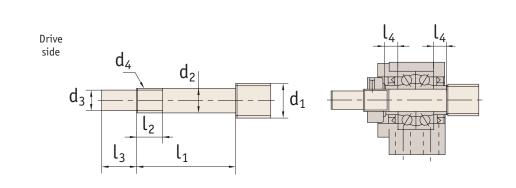

Part sno.	Thread ø	SI	Shaft upport ø				Threa		
ВК	d_1	d ₂		d ₃	l ₁	l ₃	d ₄	l ₂	l ₄
L1392.BK10	12/14/15	10	-0,008 -0,015	8	36	15	M10x1,0	12	5,5
L1392.BK12	14/15/16	12	-0,008 -0,015	10	36	15	M12x1,0	12	5,5
L1392.BK15	18/20	15	-0,008 -0,017	12	40	20	M15x1,0	12	6,0
L1392.BK17	20/25	17	-0,008 -0,017	15	53	23	M17x1,0	17	7,0
L1392.BK20	25/28	20	-0,008 -0,017	17	53	25	M20x1,0	15	8,0
L1392.BK25	32/36	25	-0,008 -0,017	20	66	30	M25x1,5	20	9,0
L1392.BK30	36/40	30	-0,008 -0,018	25	73	38	M30x1,5	25	9,0
L1392.BK35	45	35	-0,008 -0,018	30	82	45	M35x1,5	26	12,0
L1392.BK40	50	40	-0,008 -0,018	35	94	50	M40x1,5	30	15,0

