


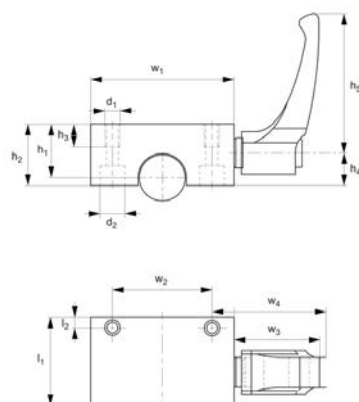

L1784

LINEAR SHAFT SUPPORTS

Material

Aluminium body, with hardened steel contact faces.

Technical Notes

Activating the clamping lever presses the

contact faces into contact with the shaft bar to clamp it in place.
For clamping from above use d_1 , for clamping from below use d_2 .

Tips

Use with shaft support rail L1780.
Pneumatic shaft clamps also available.

Order No.	Shaft dia.	h_1	l_1	w_1	w_2	w_3	w_4	h_2	h_3	h_4	h_5	l_2	d_1	d_2 for	Torque to Nm	Holding force N
L1784.012	12	18	32	43	32	30.5	33.5	24	10	16.0	44	4.5	M 5	M 4	5	1200
L1784.016	16	22	38	53	40	30.5	33.5	29	12	19.0	44	5.5	M 6	M 5	5	1200
L1784.020	20	25	44	60	45	38.5	41.5	32	14	21.5	63	6.5	M 8	M 6	7	1200
L1784.025	25	30	52	78	60	38.5	41.5	38	16	25.0	63	9.0	M10	M 8	7	1200
L1784.030	30	35	58	87	68	46.5	50.5	43	16	28.5	78	10.0	M10	M 8	12	2000
L1784.040	40	45	68	108	86	56.5	61.5	53	20	34.5	95	11.0	M12	M10	17	2000
L1784.050	50	50	76	132	108	56.5	61.5	58	22	40.5	95	12.0	M16	M14	17	2000